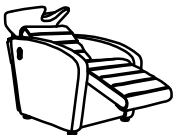




Part List

		
Ax1	Bx1	Cx1
		
Dx1	Ex1	Fx1

WARNING!


1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Installation

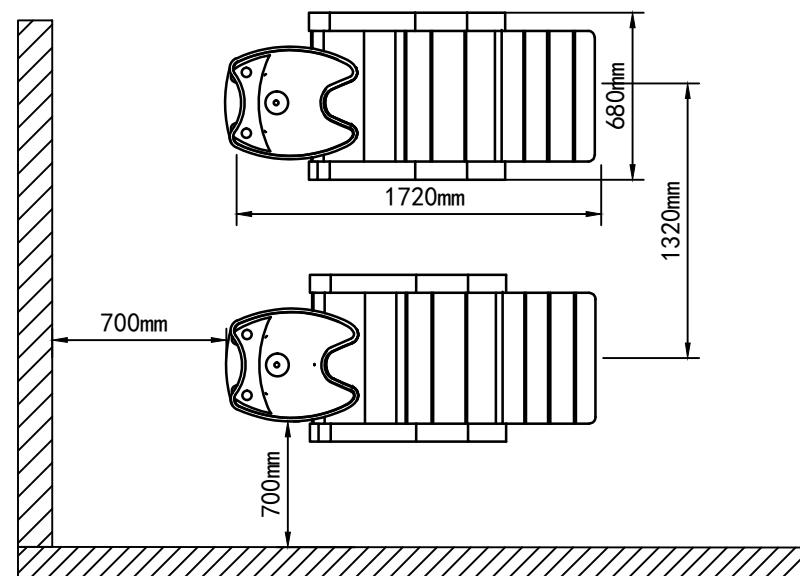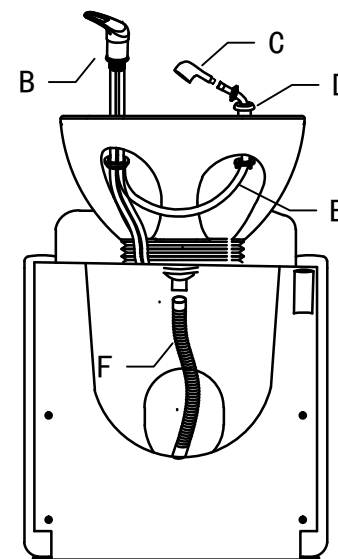

Operation

NO.	Button	Description
1	UP	Press this button, the footrest up automatically, and release the button to stop
2	DOWN	Press this button, the footrest down automatically, and release the button to stop
3	ON/OFF	Power on/off button for chair massage system
4	INTENSITY	Three levels for adjusting the intensity of massage (weak to strong /slow to fast)
5	VIBRATE	Press this button to activate the back and seat cushion vibration function
6	KNEAD	Press this button to activate the back kneading function
7	MODE	Three vibration modes can be adjusted (Tap, Stretch, Pulse)
8	REVERSE	Adjust the direction of kneading the back, reverse kneading

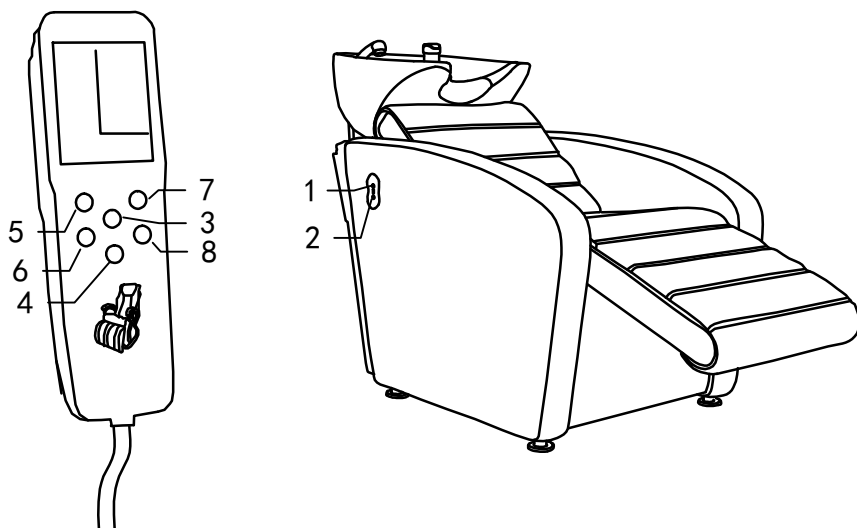

Parameters

AC 100-120v or AC 200-240v or AC 100-240v ,50/60HZ

